

SAYRE AREA SCHOOL DISTRICT TECHNOLOGY TIPS


CANON CAMCORDER VIXIA HF R500 – BASIC OPERATIONS

Purpose

To explain the basic operation of this video camera such as charging the batteries, taking pictures, recording video, and viewing recorded video.


Charging the Batteries

To charge the battery start by powering the camera by using the power cable, and plugging it into an outlet. Once plugged in attach the battery to the back of the camera by holding down the battery release (located on bottom of camera) and sliding battery on. Charging will start once the camera is shut off.

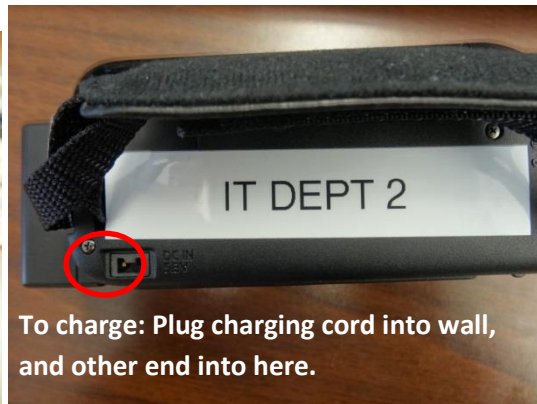


Taking a Photo

To take a photo, simply turn the camera on. Once the camera is on, touch the word “PHOTO” on the bottom left of the screen and a photo will be taken.

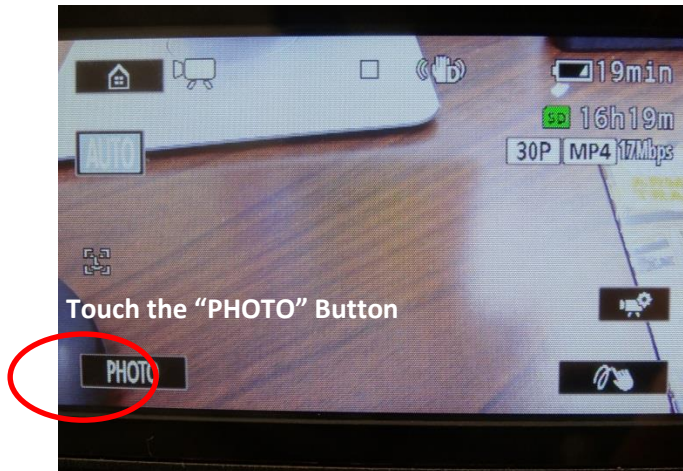

Recording Video

To take video, simply push the button with a red slit on the back of the camera next to the battery pack. This will cause the camera to start recording.

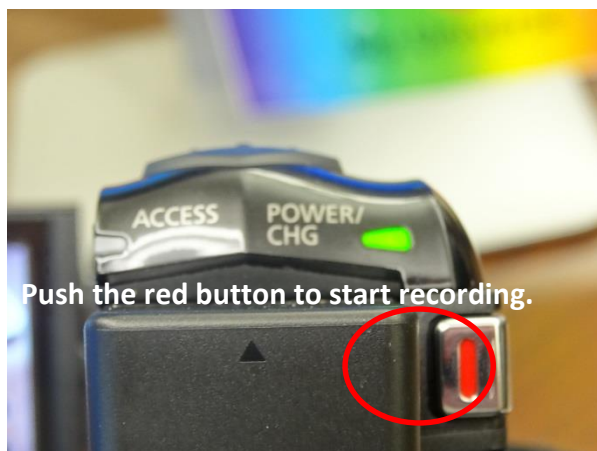

Watch Recorded Video

To view either pictures or video click the play button located below the On/Off button. Once loaded click icon in the top left corner. This will bring you to another menu. Scroll to the left or right to switch between video playback, and photo viewing.

